BEST FENCE PRO V6 INSTRUCTION MANUAL

FOR ALL BEST FENCE PRO SYSTEMS

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.


FastCap, LLC

5016 Pacific Highway Ferndale, WA 98248

Toll Free: 1-888-443-3748 Phone: 1-360-752-2138 Fax: 1-360-650-1075

Web: www.fastcap.com Email: info@fastcap.com


BEST FENCE PRO STAND SETUP

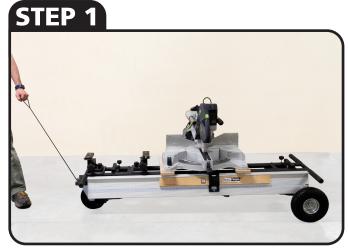

WHEEL STAND TO DESIRED LOCATION USING HANDLE



LIFT SINGLE WHEEL SIDE FIRST AND PULL LEGS OUT. THE HIGHER YOU LIFT THE EASIER.

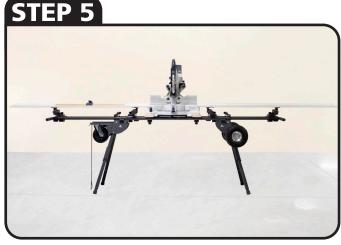

REPEAT ON OTHER SIDE TO FINISH STAND SETUP

STEP 2



RELEASE LEGS BY PULLING HANDLES ON BOTH SIDES



MAKE SURE BALL DETENT IS LOCKED IN STANDING POSITION






WHEN FOLDING BACK UP, LIFT & FOLD THE 2-WHEEL SIDE FIRST

BEST FENCE PRO SAW SETUP



POSITION SAW MOUNT ON RAILS WITH PLASTIC BRACKET PARALLEL

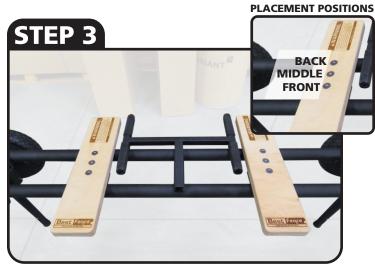

ALLOW ENOUGH SPACING FOR RACK WHEN APPLICABLE. USE PROPELLER NUTS TO PUT SAW IN BEST POSITION





ROTATE BRACKET 90° AND TIGHTEN KNOB TO LOCK IN PLACE



PLACE SAW ON RAILS, WAIT TO SCREW DOWN UNTIL FENCES ARE ALIGNED (PG. 3 & 4)



MOUNT SAW WITH PROVIDED POWERHEAD SCREWS (FOUND IN HARDWARE KIT)

BEST FENCE PRO FENCE SETUP



LOOSEN KNOBS AND PULL OUT ARMS FROM STAND. TIGHTEN KNOBS.



ALIGN HOLE ON FENCE WITH LINE ON PRECISION ADJUSTMENT BLOCK AND INSERT PIN TO LOCK IN PLACE



SIDE KNOB FRO HORIZONTAL ADJUSTMENTS





PLACE FENCE ON PRECISION ADJUSTMENT BLOCKS BY HOOKING THE BACKSIDE FIRST



USE LEVEL TO ALIGN FENCE WITH SAW. ONCE ALIGNED, SCREW DOWN SAW.



BOTTOM KNOB FOR HEIGHT ADJUSTMENT

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.

BEST FENCE PRO BLOCK ALIGNMENT



POSITION BLOCK ON RAILS WITH BOTTOM BRACKET PARALLEL






LOOSEN AND HOLD ASSEMBLY WHILE ROTATING BOTTOM BRACKET 90°




TIGHTEN ADJUSTMENT KNOB TO LOCK BLOCK IN PLACE

TROUBLESHOOTING

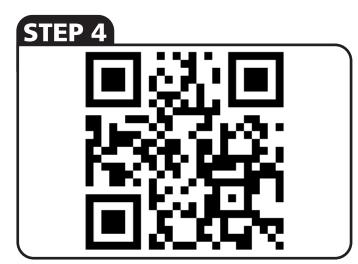


FOR VIDEO INSTRUCTIONS ON CONVERTERING PABS TO A BEST FENCE PRO SYSTEM

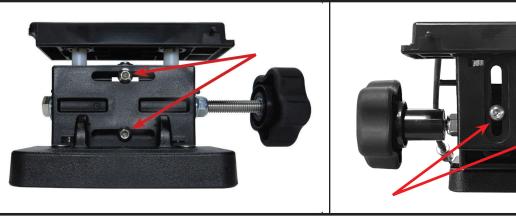


IF THERE IS EXCESS MOVEMENT IN THE PRECISION ADJUSTMENT BLOCK TIGHTEN THE ALLEN SCREWS

BEST FENCE MALE-MALE SETUP


STEP 2

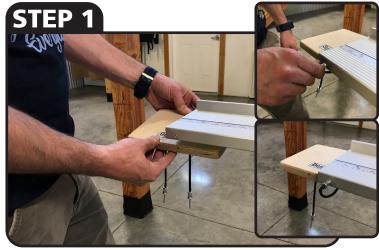

POSITION MALE-MALE CONNECTOR SO THAT FENCE END IS ON MIDDLE LINE. USE ATTACHED PIN TO SECURE IN PLACE. POSITION UPPER HAND AND ATTACHED SECOND FENCE

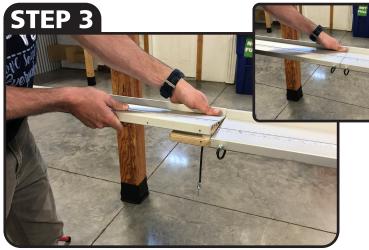

POSITION FENCE ONTO MALE-MALE CONNECTOR AND USE ATTACHED PIN TO SECURE IN PLACE

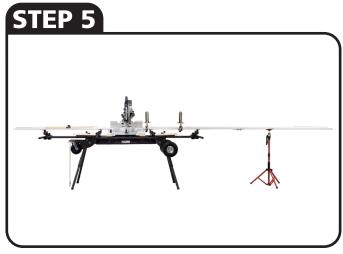

REPEAT STEP 1 - 4 ON SECOND FENCE



USE THE PRECISION PUMP JACK TO LEVEL FENCES



FENCE CONNECTOR SET UP

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.

BEST FENCE PRO ACCESSORIES



ATTACH BAG RACK BY SLIDING POST **INTO HOLE**

ONLY AVAILABLE FOR BEST FENCE 3 OR 4, BEST FENCE PRO 3 OR 4



INSERT WORK TABLE INTO ACCESSORY HOLE WHERE DESIRED & TIGHTEN KNOB TO SECURE

ONLY AVAILABLE FOR BEST FENCE 3 OR 4. BEST FENCE PRO 3 OR 4

STEP



SLIDE BAG ONTO BAG RACK *ONLY AVAILABLE FOR BEST FENCE 3 OR 4, BEST FENCE PRO 3 OR 4*




LUMBER RACKS CAN BE FOLDED **OPEN TO SUPPORT EXTRA LUMBER**



STEP 1: ATTACH ARM BY HOOKING REAR FIRST THEN TIGHTENING WEDGE KNOB STEP 2: ADJUST L-BRACKET AND PLASTIC SLIDE TO FIT SIZE OF YOUR CROWN MOLDING STEP 3: TO REMOVE ARM, SLIDE ALL PIECES OFF THE BEST FENCE. UNSCREW BOTTOM KNOB AND PUSH UP TO RELEASE WEDGE FROM BEST FENCE.

BEST FENCE PRO BLOCK SPACER

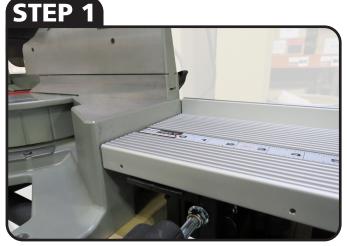


SOME SAWS HAVE HIGHER DECKS REQUIRING SPACERS FOR PRECISION ADJUSTMENT BLOCKS






INSTALL INCLUDED SPACERS TO TOP PLATE

TROUBLESHOOTING

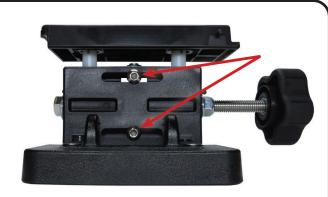

IF THERE IS EXCESS MOVEMENT IN THE PRECISION ADJUSTMENT BLOCK TIGHTEN THE ALLEN SCREWS. STEP 2

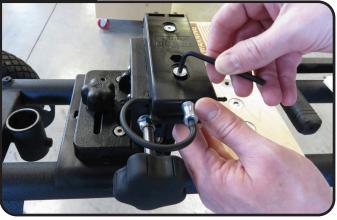

REMOVE FENCE AND UNSCREW TOP PLATE FROM BLOCK WITH INCLUDED WRENCH



INSTALL TOP PLATE INTO PRECISION ADJUSTMENT BLOCKS



ADJUST SET SCREWS TO CHANGE FORWARD/BACKWARD PITCH OF PAB IF NECESSARY

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.