# **BEST FENCE PRO** INSTRUCTION MANUAL



## FOR ALL BEST FENCE PRO SYSTEMS

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.

#### FastCap, LLC

5016 Pacific Highway Ferndale, WA 98248

Toll Free: 1-888-443-3748 Phone: 1-360-752-2138 Fax: 1-360-650-1075

Web: www.fastcap.com Email: info@fastcap.com

MARCH 2018

## **BEST FENCE PRO STAND SETUP**



POSITION THE STAND WHERE YOU WANT TO SET IT UP



LIFT ONE SIDE OF STAND AND PULL LEGS TO STANDING POSITION





RELEASE LEGS BY PULLING HANDLES ON BOTH SIDES



MAKE SURE BALL DETENT IS LOCKED IN STANDING POSITION



REPEAT ON OTHER SIDE TO FINISH STAND SETUP

#### **BEST FENCE PRO WHEEL INSTALLATION**



LOCATE WHEELS LOCK PINS IN HARDWARE KIT





**SLIDE WHEEL ONTO AXLE** 



INSERT LOCKING PIN THROUGH HOLE IN AXLE



FLIP DOWN RING TO LOCK PIN IN PLACE

## **BEST FENCE PRO SAW SETUP**



POSITION SAW MOUNT ON RAILS WITH PLASTIC BRACKET PARALLEL



ALLOW ENOUGH SPACING FOR RACK WHEN APPLICABLE

STEP 2



ROTATE BRACKET 90° AND TIGHTEN KNOB TO LOCK IN PLACE





#### MOUNT SAW WITH PROVIDED POWERHEAD SCREWS (FOUND IN HARDWARE KIT)

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.

## **BEST FENCE PRO BLOCK ADJUSTMENTS**





POSITION BLOCK ON RAILS WITH BOTTOM BRACKET PARALLEL






LOOSEN AND HOLD ASSEMBLY WHILE ROTATING BOTTOM BRACKET 90°




TIGHTEN ADJUSTMENT KNOB TO LOCK BLOCK IN PLACE

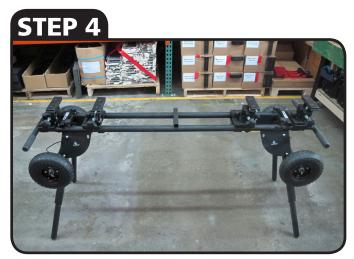


**REPEAT WITH OTHER BLOCKS** 


## **BEST FENCE PRO FENCE SETUP**

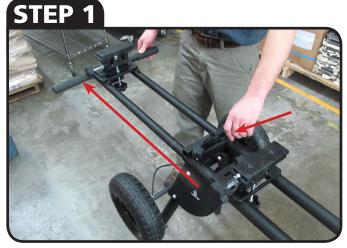

LOOSEN KNOBS AND PULL OUT ARMS FROM STAND. TIGHTEN KNOBS.

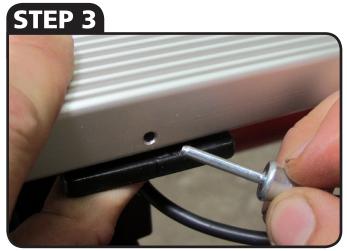

ALIGN HOLE ON FENCE WITH LINE ON PRECISION ADJUSTMENT BLOCK AND INSERT PIN TO LOCK IN PLACE

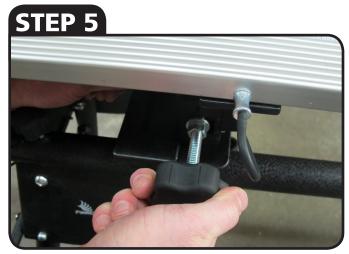

SIDE KNOB MICRO ADJUSTMENT FOR IN AND OUT





PLACE FENCE ON PRECISION ADJUSTMENT BLOCKS BY HOOKING THE BACKSIDE FIRST



TOP KNOB MACRO ADJUST FOR IN AND OUT



#### BOTTOM KNOB FOR HEIGHT ADJUSTMENT

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.

## **BEST FENCE PRO BAG & RACK**



ATTACH FRONT BAG RACK BY SLIDING POST INTO HOLE





**SLIDE BAG ONTO FRONT RACK** 

## **BEST FENCE PRO ACCESSORIES**



INSERT WORK TABLE INTO ACCESSORY HOLE WHERE DESIRED



LUMBER RACKS CAN BE FOLDED OPEN TO SUPPORT EXTRA LUMBER

## **BEST FENCE PRO MALE-MALE SETUP**



POSITION MALE-MALE CONNECTOR SO THAT FENCE END IS ON MIDDLE LINE



DRILL THROUGH ALUMINUM AND PLASTIC. USE ATTACHED PIN TO SECURE IN PLACE




**REPEAT STEP 3 ON SECOND FENCE** 





PENCIL IN A LINE 5/16" FROM THE BOTTOM & 5/8" FROM THE TOP OF THE FENCE, ABOVE THE MALE-TO-MALE CONNECTOR

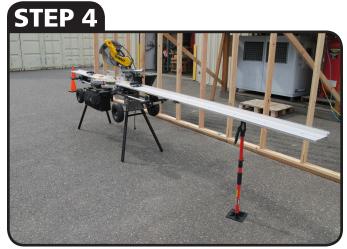

ATTACH SECOND FENCE AND POSITION UPPER HAND FOR SUPPORT



#### **BEST FENCE CROWN MOLDING STOP**



LOCATE COMPONENTS IN ACCESSORY BAG





ATTACH ARM BY HOOKING REAR FIRST THEN TIGHTENING WEDGE KNOB




ADJUST L-BRACKET AND PLASTIC SLIDE TO FIT SIZE OF YOUR CROWN MOLDING




TO REMOVE ARM, SLIDE ALL PIECES OFF THE BEST FENCE. UNSCREW BOTTOM KNOB AND PUSH UP TO RELEASE WEDGE FROM BEST FENCE.

## **BEST FENCE PRO FENCE SPACER**

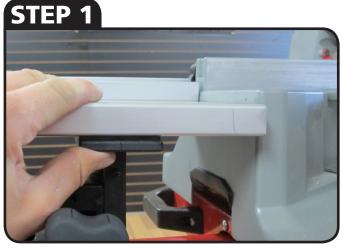

SOME SAWS HAVE HIGHER DECKS REQUIRING SPACERS FOR PRECISION ADJUSTMENT BLOCKS



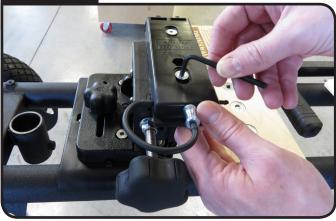

REMOVE FENCE AND UNSCREW TOP PLATE FROM BLOCK WITH INCLUDED WRENCH



REATTACH TOP PLATE TO PRECISION ADJUSTMENT BLOCK WITH LONGER SCREWS






LOCATE BAG OF SPACER HARDWARE INCLUDED WITH YOUR SYSTEM



INSTALL INCLUDED SPACERS TO TOP PLATE

#### TROUBLESHOOTING

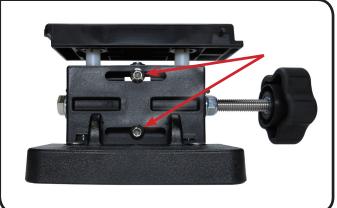

IF THERE IS EXCESS MOVEMENT IN THE PRECISION ADJUSTMENT BLOCK TIGHTEN THE ALLEN SCREWS

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM. PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.



**VISTI WWW.FASTCAP.COM FOR EVEN MORE GREAT PRODUCTS!**