

BEST FENCE BOSCH

ASSEMBLY INSTRUCTIONS



FastCap, LLC

5016 Pacific Highway
Ferndale, WA 98248

Toll Free: 1-888-443-3748

Phone: 1-360-752-2138

Fax: 1-360-650-1075

Web: www.fastcap.com

Email: info@fastcap.com

**Bosch
Instructions**



BEST FENCE BOSCH INSTRUCTIONS

STEP 1




INSTALL PAB

STEP 2



ATTACH FENCE AND INSERT PIN

STEP 3

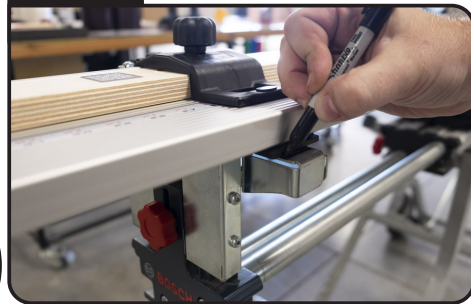


MAP PLACEMENT FOR ADAPTER BLOCK AND ALIGN

STEP 4



PRE-DRILL HOLES FOR ADAPTER BLOCK

STEP 5

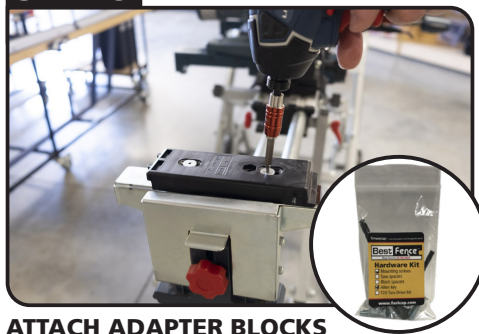

ATTACH ADAPTER BLOCKS USING PROVIDED HARDWARE

STEP 6



FINAL ALIGNMENT

INSTALLING BLOCK SPACERS

STEP 1




SOME SAWS HAVE HIGHER DECKS REQUIRING SPACERS FOR PRECISION ADJUSTMENT BLOCKS

STEP 2



LOCATE BAG OF SPACER HARDWARE INCLUDED WITH YOUR SYSTEM

STEP 3

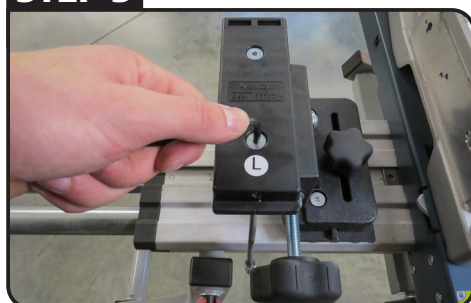


REMOVE FENCE AND UNSCREW TOP PLATE FROM BLOCK WITH INCLUDED WRENCH

STEP 4



INSTALL INCLUDED SPACERS TO TOP PLATE

STEP 5

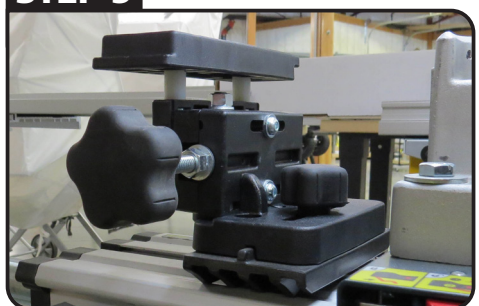

REATTACH TOP PLATE TO PRECISION ADJUSTMENT BLOCK WITH LONGER SCREWS

TROUBLESHOOTING



IF THERE IS EXCESS MOVEMENT IN THE PRECISION ADJUSTMENT BLOCK TIGHTEN THE ALLEN SCREWS

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM.
PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.