


BEST FENCE DEWALT D4 INSTRUCTIONS

STEP 1

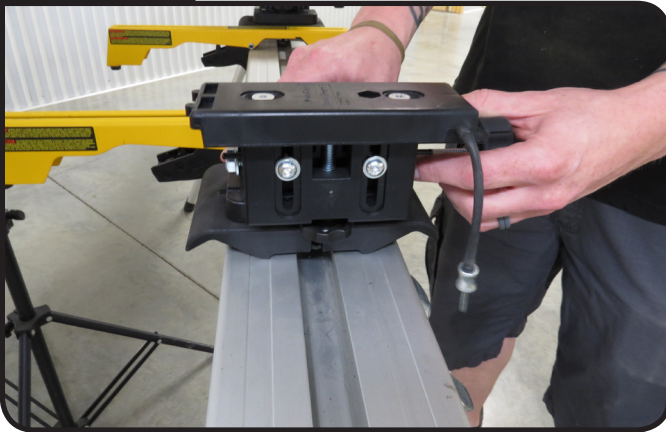

**MOUNT PABS TO STAND
USING T-NUTS**

STEP 2




PLACE FENCE ON PABS

STEP 3




INSERT PIN TO LOCK IN PLACE

STEP 4

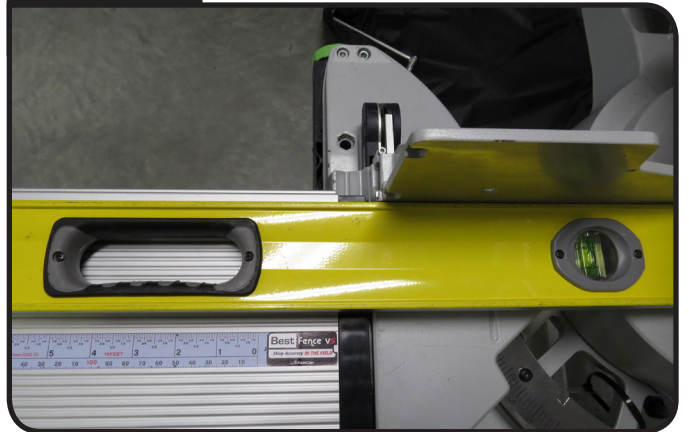

**USE STRAIGHT-EDGE AND
ADJUSTMENT KNOBS TO ALIGN FENCE
WITH SAW**

STEP 5

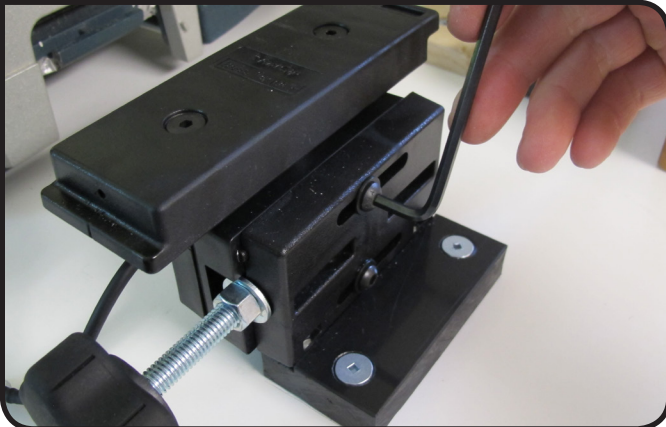

**ADJUST ALLEN SCREWS AND SHIM TO
ADJUST TILT**


STEP 6



MORE INFO SCAN TO VIDEO SET UP

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM.
PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.

ACCESSORIES + MORE

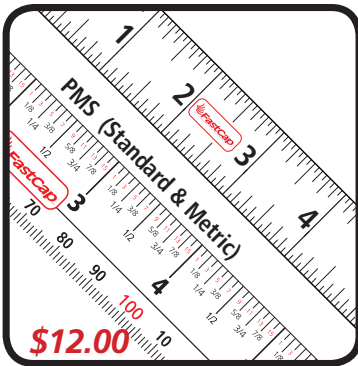

PS 16' & PMS 16 Reversible Tapes



11th Finger



Crown Molding Stop



Fence Adapter Block



Best Fence Stop



Male-Male Connector



Mag Power Strip Mount




Best Fence Accessory Bag



Fence by the Foot



Work Table

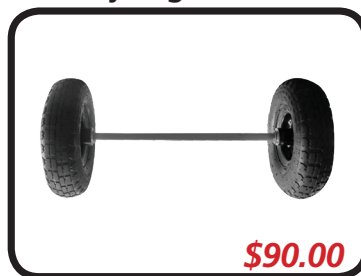

Wheel Assembly (per side)



Precision Adjustment Block



Zero Clearance Tape



ChopShop Sawhood PRO



ChopShop Sawhood



Flex Light



10 Million Dollar Stick

VISTI WWW.FASTCAP.COM FOR EVEN MORE GREAT PRODUCTS!