

Owners Guide for

Best Fence™

Prove Us Wrong

June 2011

Best Fence System



ChopShop Sawhood sold separately.
Miter saw not included...of course.


Visit www.fastcap.com/bestfence for instructional videos and a complete list of parts and product description.

Owners Guide for


Best Fence™

Prove Us Wrong

System Includes:

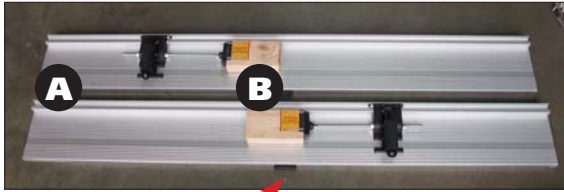

Leveling vials on both fences

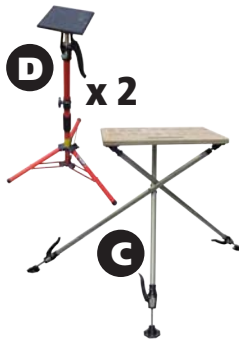


Bulls eye level on saw platform



PART	DESCRIPTION	QTY
A	57" Aluminum Extruded Fences w/ levels	2
B	Cam lock saw stop System for left and right side	2
C	Best Fence Tripod	1
D	Upper Hands™ with 3-H Tripods	2
E	6" x 6" Universal Feet	4
F	Best Fence Platform (1-1/8" x 16" x 24" plywood)	1
G	Customized carrying bag	1

Installation Hardware:

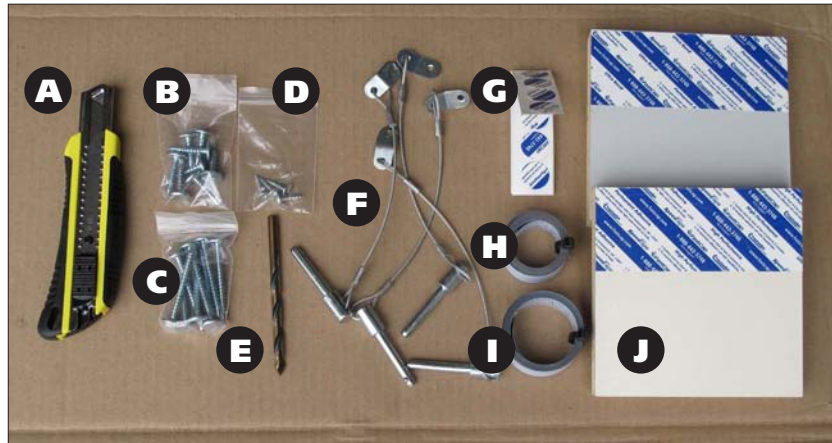

PART	DESCRIPTION	QTY
A	TriBlade Knife	1
B	1" Metal Screws	8
C	2" Metal Screws	8
D	5/8" Wood Screws	4
E	1-1/4" Plastic Drill Bit	1
F	Pin Stops	4
G	18mm Speedtape dots	8
H	12' PMS Left Read Tape	1
I	12' PMS Right Read Tape	1
J	5"x5" Blocks for shaping Best Fence Brackets	2
K	Male to Male Connector w/attached pin stops	1
L	Right Hand Plastic Bracket	1
M	Left Hand Plastic Bracket	1

Owners Guide for



Prove Us Wrong

Assembling the Best Fence Tripod:

Bulls eye level is recessed for an unobstructed Best Fence Platform



3-H Pump Jack legs allows for easy leveling of your Best Fence tripod stand.




Match up the colored dots on the poles with the Best Fence Platform.



Start assembling by pressing the pole into the BF foot with the green dot, then move to the red dot, and finish with the yellow dot. (Will be a secure fit, press firmly!)



To take down, start with yellow and gently pull while stepping on its platform until the pole releases. Move to the red and finally the green which will be easy to remove by folding the tripod in the direction of the arrow shown.

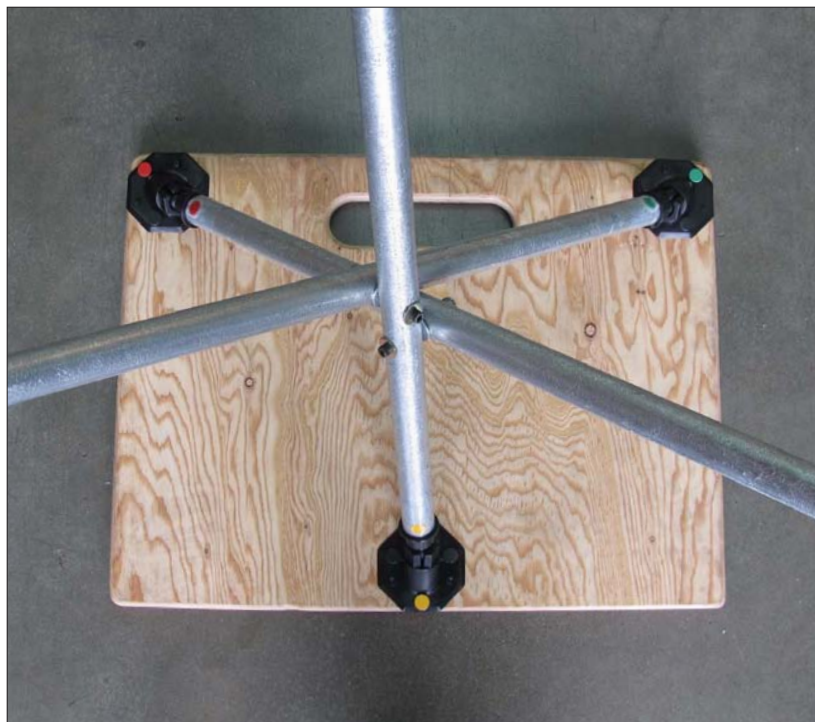

Color-coded dots ensure that the base is correctly set up, every time.

Owners Guide for

Best Fence™

Prove Us Wrong

Installation of Plastic Bracket:

Retrofitting the provided plastic brackets may be required in order to achieve a secure fit for your particular saw if it has a contoured base. The steps below will walk you through this process, as well as a detailed video is available for viewing at www.fastcap.com/bestfence. Once there, click on the video "Best Fence Assembly" for detailed step-by-step instructions.



1 Using one of the provided 5" x 5" blocks, scribe the shape of your saw base onto the underside of the non-taped side of the block.



2 After scoring the contour of your saw's base, sand the block down to the score line. Use shaped block to transfer line to the Best Fence mount.




3 Transfer the new edge of the block onto the bracket by scribing directly into the bracket with the provided utility knife.



4 Sand down to the scribed line on your BF mounting bracket.



6 Knock off any residual material left over from sanding it down with your utility knife.

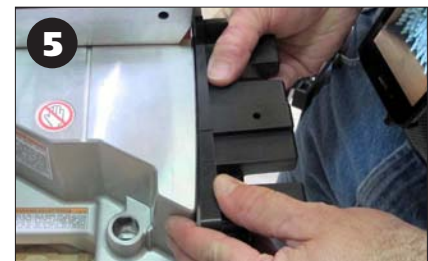

5 Check the fit. There should not be any gaps, and the mounting bracket should be perpendicular to the saw base.



7 With the same block, peel off the adhesive backing and secure it to the saw's base with about an inch of overhang. This is to ensure that the bracket is squared to the saw base.



8 Place the bracket onto the desired location allowing the adhesive to hold it in place at the top. Using the 1" & 2" screws provided, permanently affix the bracket to your saw.



9 After removing the block, the result will be a custom-fitted bracket that is contoured to the base of your saw.



10 Slide the rails onto the bracket and with the provided drill bit, bore a hole through the plastic bracket using the pre-drilled holes on the fence as your guide.



11 Slide the pin in to securely lock the fence to the BF mounting bracket. Lifting or lowering the far end of the fence will help the pin to slide into place easily.



12 The male to male connector is used to extend the length of your fence. Holes are pre-drilled. Simply lock into place using the attached pin stops.

Owners Guide for

Best Fence™


Prove Us Wrong

Installation of Tape Measure:

Once you have mounted the brackets onto your saw's base, and have slid and locked the Best Fence into position, you can easily install the left and right reading tape measures onto the fence.



1 Insert the zero end of the Best Fence (BF) tape into the track on the far end and slide the tape to the start of the fence (attached to saw base).

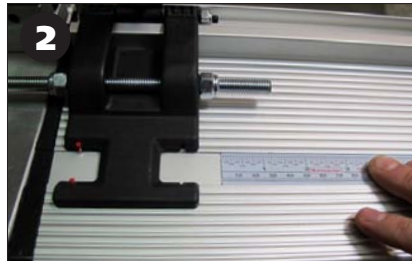

2 The tape and the Best Fence stop assembly (shown) will need to be zeroed out.




3 This picture shows the stop assembly in the zeroed out position. Now you are ready to secure the tape to the Best Fence.



4 Extend the tape enough to apply a Peel & Stick (PS) dot onto the underside. Peel off the liner, but do not press it down yet.



5 Apply another PS dot on the underside of the tape at the far end of the Best Fence between the 56" & 57" mark.

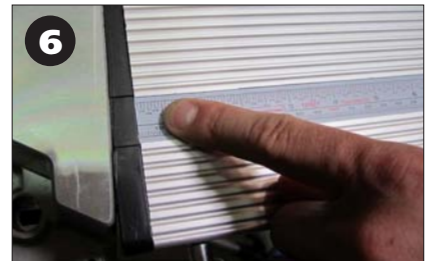

6 Slide the tape back into the proper position and once zeroed, press down firmly on the tape to adhere the PS dot to the fence.



7 Ensure that the tape is flat and in the recess of the track and then press down firmly on the PS dot at the other end.



8 With the tape now installed, cut off the excess tape with a sharp pair of scissors.



9 Zero out the stop assembly in accordance to the tapes reading and cut off the excess portion of 2x4 block.



10 Your Best Fence is now fully calibrated and ready for use!