

BEST FENCE BENCH MOUNT

ASSEMBLY INSTRUCTIONS



FastCap, LLC

5016 Pacific Highway
Ferndale, WA 98248

Toll Free: 1-888-443-3748


Phone: 1-360-752-2138

Fax: 1-360-650-1075

Web: www.fastcap.com

Email: info@fastcap.com

Bench Mount Instructions

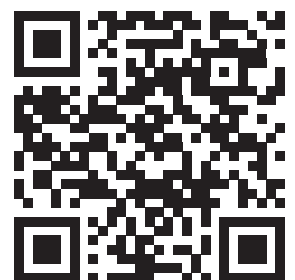

SETTING UP THE BLOCKS & FENCES

STEP 1



MOUNT SAW TO WORKBENCH WITH INCLUDED MOUNTING HARDWARE

STEP 2



MOUNT PRECISION ADJUSTMENT BLOCKS TO WORKBENCH IN LINE WITH SAW

STEP 3




PLACE FENCE ON PRECISION ADJUSTMENT BLOCKS BY HOOKING THE BACKSIDE FIRST

STEP 4



ALIGN HOLE ON FENCE WITH LINE ON PRECISION ADJUSTMENT BLOCK AND INSERT PIN TO LOCK IN PLACE

STEP 5

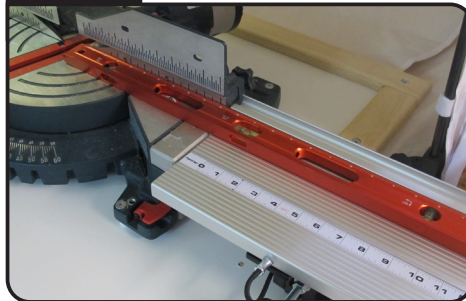

USE STRAIGHTEDGE TO DIAL-IN FENCE TO SAW

TROUBLESHOOTING



TIGHTEN ALLEN SCREWS IF THERE IS EXCESS MOVEMENT IN THE PRECISION ADJUSTMENT BLOCK

INSTALLING BLOCK SPACERS

STEP 1




SOME SAWS HAVE HIGHER DECKS REQUIRING SPACERS FOR PRECISION ADJUSTMENT BLOCKS

STEP 2



LOCATE BAG OF SPACER HARDWARE INCLUDED WITH YOUR SYSTEM

STEP 3

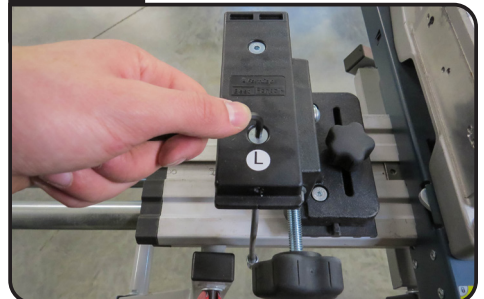


REMOVE FENCE AND UNSCREW TOP PLATE FROM BLOCK WITH INCLUDED WRENCH

STEP 4



INSTALL INCLUDED SPACERS TO TOP PLATE

STEP 5

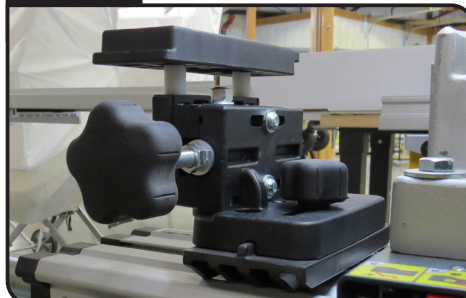

REATTACH TOP PLATE TO PRECISION ADJUSTMENT BLOCK WITH LONGER SCREWS

TROUBLESHOOTING



IF THERE IS EXCESS MOVEMENT IN THE PRECISION ADJUSTMENT BLOCK TIGHTEN THE ALLEN SCREWS

SOME FEATURES AND ACCESSORIES MAY NOT BE INCLUDED WITH YOUR SYSTEM.
PLEASE VISIT WWW.FASTCAP.COM FOR MORE DETAILS.